e| • • • A NINITAR COMPANY

PL-D752

CMOS | SONY IMX174 | GLOBAL SHUTTER

The PL-D family of cameras links together the benefits of high frame rate CMOS technology with the high speed data throughput of USB 3.0 technology. The PL-D752 camera provides low noise images for outstanding value for a broad range of industrial applications.



KEY FEATURES













Ð

USB 3











5.86um

MONO



TYPICAL APPLICATIONS

Parts inspection Strength Testing Metrology

Biometrics Medical Imaging PCB & Flat Panel Display Inpsection



1.833.247.1211 (North America) +1.613.247.1211 (International)

TECHNICAL SPECIFICATIONS

PL-D752

SENSOR

Pixel

A NINITAR COMPANY

Sensor	Sony IMX174
Туре	CMOS Global Shutter
Resolution	2.3 MP (1920 x 1200)
Pixel Pitch	5.86 μm x 5.86 μm
Active Area	13.4 mm diagonal

PERFORMANCE SPECIFICATIONS

FPN	< 0.03% of signal	
PRNU	< 0.4% of signal	
Dynamic Range	70 dB	
Bit Depth	8 or 12-bit	
Color Data Formats	Bayer 8, Bayer 12 Packed, Bayer 16 & YUV422	
Mono Data Formats	Mono 8, Mono 12 Packed & Mono 16	

FRAME RATES

Resolution	Free Running
1920 x 1200	166.6 fps
1280 x 1024	194.2 fps
640 x 480	398.2 fps
Frame rates will vary based on host system and configuration	

*Above calculations based on fixed frame rate mode

INTERFACES

Interface Date rate	USB 3.0 Micro-B 5Gbps
Board Level Trigger	8-pin Molex 1.25mm pitch
Connector	
Enclosed Trigger	Hirose round 8-pin
Connector	
Trigger	Software and hardware
Board Level Trigger	1 input, 3.3V (with internal
Input	pullup resistor)
Enclosed Trigger Input	1 optically Isolated,
	5-12V DC at 4-11 mA
Board Level GPO/Strobe	2 outputs, 3.3V
Enclosed GPO/Strobe	2 outputs, 3.3V and 1 optically
	isolated max 40V DC, max 15mA
GPI	1 input, 3.3V (with internal
	pullup resistor)

MECHANICALS

Dimensions (mm)	
Weight (g)	
Mounting	

55 x 38.5 x 30.23 35.8 (Board level without optics) C-Mount

POWER REQUIREMENTS

Voltage Required

5V DC (from USB connector)

PIN NAME & FUNCTION

1	3.3V power output
2	TRIGGER/GPI 3.3V HCMOS input
3	Ground

- 4 GPO1, 3.3V HCMOS output
- 5 GPO2, 3.3V HCMOS output
- 6 Clock, 3.3V (I2C access for OEMs)
- 7 Data, 3.3V (I2C access for OEMs)
- 8 No connection

Board connector: Molex (8-pin, 1.25mm pitch, vertical); Cable receptacle: Molex 51021-0800; Cable crimp terminals: Molex 50079-8100

ENCLOSED GPIO INTERFACE PIN OUTPUT DESCRIPTION

- 1 VBUS (Power output from USB3 cable)
- 2 TRIGGER + (optically isolated)
- 3 TRIGGER (optically isolated)
- 4 GPO1 + (optically isolated)
- 5 GPO1 (optically isolated)
- 6 GPO1, 3.3V HCMOS output (I2C SCL for autofocus)
- 7 GPO2, 3.3V HCMOS output (I2C SDA for autofocus)
- 8 Ground (logic and chassis ground)

ENVIRONMENTAL & REGULATORY

Compliance	FCC, CE & RoHS
Shock & Vibration	300 G & 20 G (10Hz - 2KHz)
Operating Temperature	0°C to 50°C
Storage Temperature	-45°C to 85°C

SOFTWARE

Pixelink Capture	Control & operate multi-camera
Pixelink SDK	Software Development Kit
Pixelink µScope	Acquisition, analysis & reporting
3rd. Party U3V Vision App	lications

COMPUTER & OPERATING SYSTEM				
	Windows	Linux x86	Linux ArmV7	Linux ArmV8
Processor	Intel i5 or better	Intel i5 or better	Arm7 (32 bit)	Arm8 (64 bit)
Memory	4GB recommended	4GB recommended	2GB	2GB
Hard Drive Space	150 MB	150 MB	50 MB	50 MB
Operating System	Windows 7/8/10	Ubuntu 14.04/16.04 Desktop	Ubuntu 14.04/16.04	Ubuntu 14.04/16.04




1.833.247.1211 (North America) +1.613.247.1211 (International)





MECHANICAL DRAWINGS


Pixelink® A NENITAR COMPANY

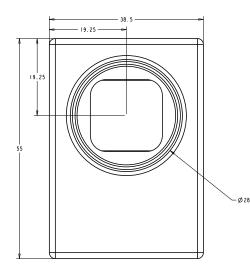


PL-D752

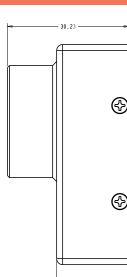

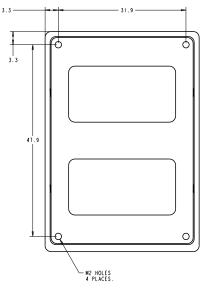


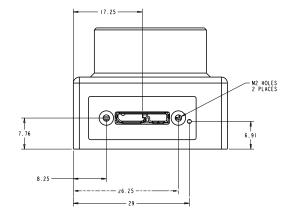

RESPONSIVITY CURVE - COLOR

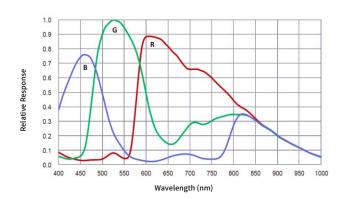

RESPONSIVITY CURVE - MONO

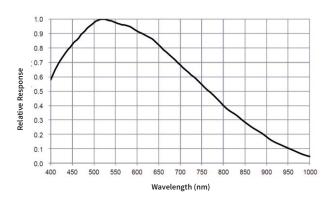



1.833.247.1211 (North America) +1.613.247.1211 (International)

PIXELINK'S INDUSTRY LEADING SOFTWARE

PIXELINK CAPTURE

Pi**x**elink®

Pixelink Capture is powerful multi-camera software application designed to configure "n" numbers of cameras and stream "n" number of cameras simultaneously in real-time high-quality video viewed in a multi-window environment. Pixelink Capture offers options for complex image enhancements such as; exposure control, filtering, frame-by-frame property changes in addition to multi-camera application testing and configuration.

PL-D752

Pixelink Capture also provides features to measure supporting; point, line, circle, rectangle, polyline and polygon measurements while determining pixel location. After creating spatial calibration, the user can then review and adjust before exporting the findings to an Excel spreadsheet for further analysis. Pixelink Capture also has integrated lens control (zoom & focus) for Navitar motorized lenses and accurate autofocus options for Navitar motorized fine focus mechanisms.

Visit pixelink.com for more detailed information.

PIXELINK SDK

Providing full control of all camera functions, the **Pixelink Software Developers Kit (SDK**) is the software package of choice for developers and system integrators who are integrating Pixelink cameras into their applications. The Pixelink SDK provides access to the full Pixelink Application Programming Interface (API) and provides sample applications, wrappers for many 3rd party controls, such as LabVIEW, along with full documentation.

The Pixelink SDK is compatible with Microsoft Windows and popular Linux platforms. When using the Pixelink SDK, developers can integrate Pixelink cameras into their custom applications with ease.

Visit pixelink.com for more detailed information.

AVAILABLE CONFIGURATIONS

PL-D752CU PL-D752CU-BL PL-D752CU-T PL-D752MU PL-D752MU-BL PL-D752MU-T

Color Space C = Color M = Mono NIR = Near Infrared

Interface

G = GigE

U = USB

F = Firewire

Housing CS = CS Mount S-BL = S Mount Board Level BL = Board Level T = Trigger



1.833.247.1211 (North America) +1.613.247.1211 (International)